

1 Firmware Upgrade Instructions – Nanogrid Air

1.1 Open Nanogrid Air Settings Page and Login

Open Nanogrid Air Settings page (see Figure 1) by accessing its local IP-address using a web browser. Check your WiFi-router manual for instructions on how to receive the correct local IP-address for your Nanogrid Air.

Instead of using the local IP-address the address <http://ctek-ng-air.local> can be used – if your router supports mDNS.

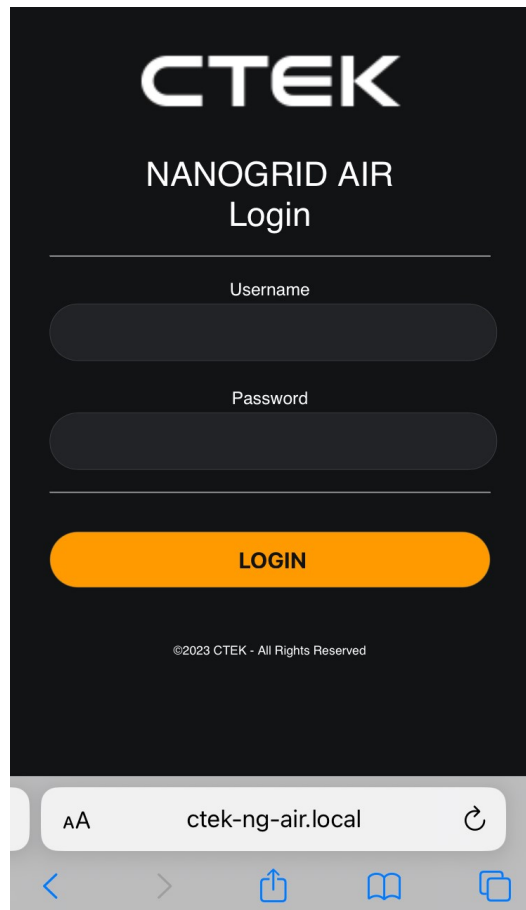


Figure 1 Nanogrid Air Settings Page

Login using *ctek* as Username and then the Password you selected during the Nanogrid Air configuration process. Please refer to the Nanogrid Air manual for further details if needed.

1.2 Select Firmware

Scroll down to Firmware Upgrade and press Select File – see Figure 2. Locate and select your downloaded Firmware. The Firmware is available for Download at:

<https://www.ctek.com/support/software-firmware>

Press the Upload button.

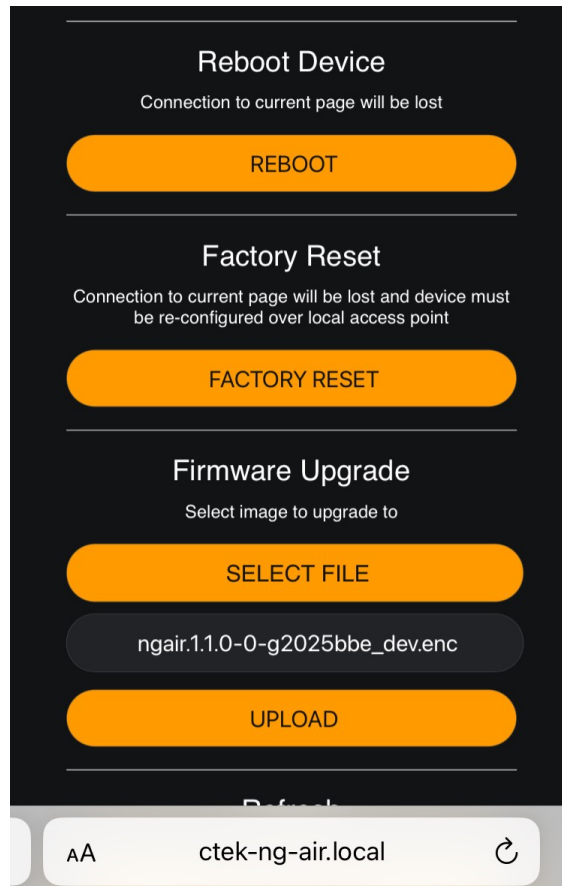


Figure 2 Firmware Upgrade

1.3 Reboot Nanogrid Air

Check so that the message “File upload complete reboot to upgrade” is displayed – see Figure 3.

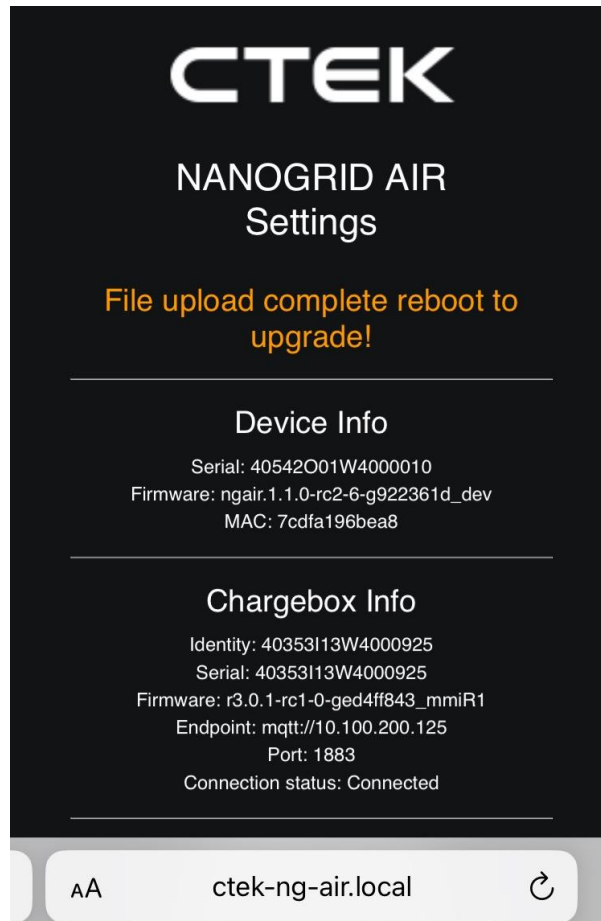


Figure 3 Upload Complete

Reboot Nanogrid Air by pressing REBOOT – see Figure 2.

When Nanogrid Air has completed the reboot you can login again. Under the headline *Device Info* the new firmware revision number will be displayed – see Figure 2.

Firmware Upgrade is now complete.

2 Document Release Notes

Document Number	Information	Date
20231009002	Document Created.	2023-10-09